

GF Not heating troubleshooting guide.

1. Check the continuity of the thermal reset switch figure 1, this should be close to 0 ohms.



Figure 1, testing the continuity of the reset switch.

2. Check the element resistance, this should be close to 25 ohms, figure 2.

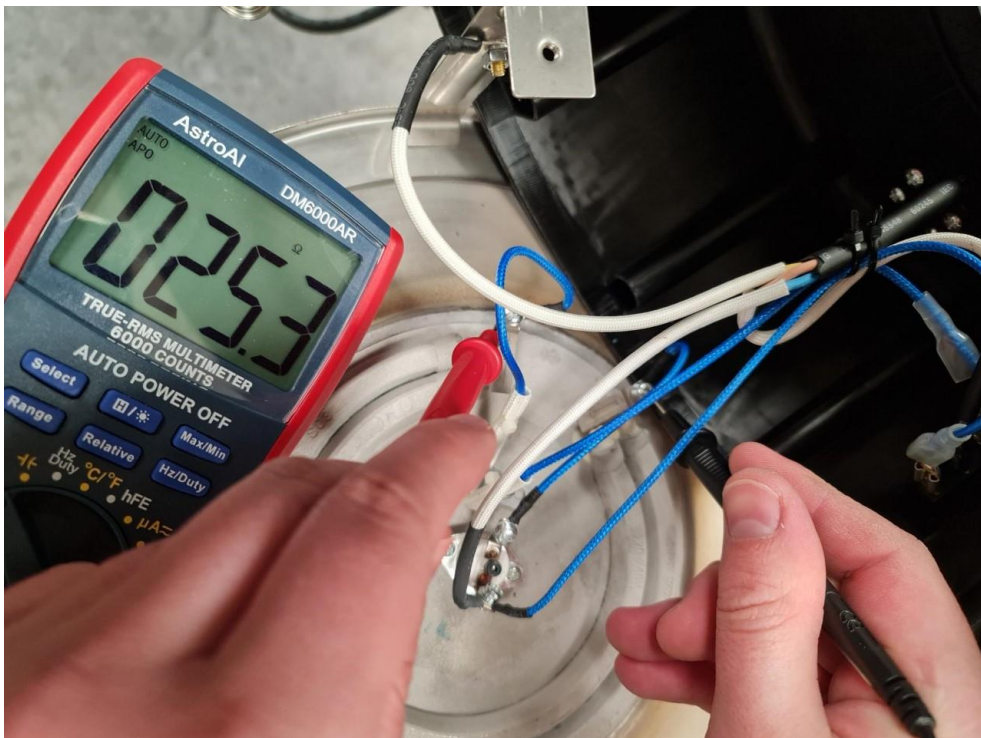


Figure 2, Testing the resistance of the heating elements.

3. Check the thermal fuse by testing the wiring going from the left connector on the element and the top connector of the power switch, figure 3.

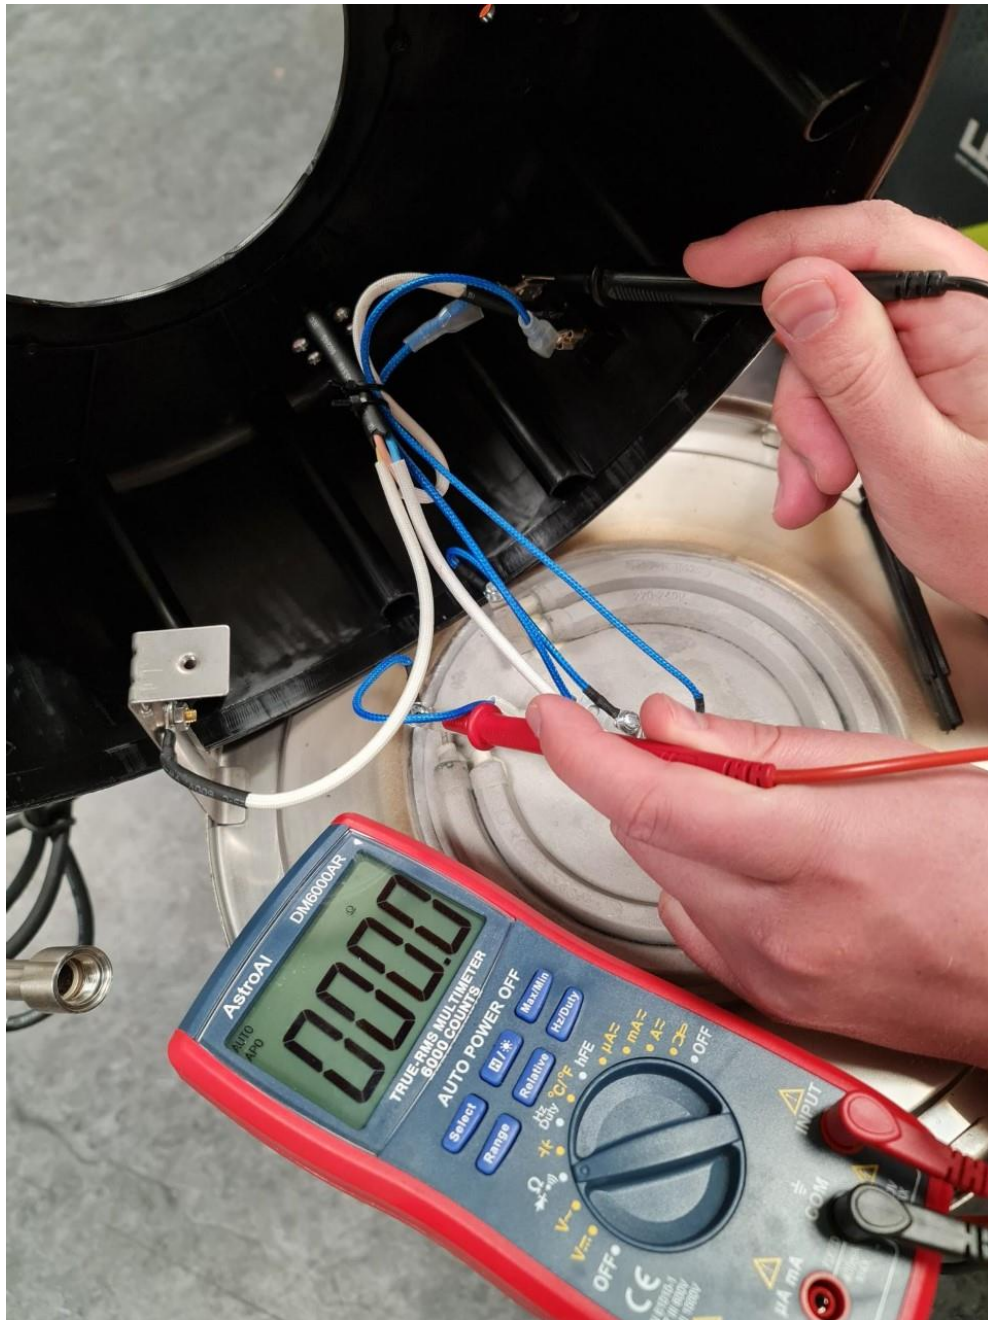


Figure 3, Testing the thermal fuse.

4. Check the continuity of the wiring through the reset switch, this is done by testing the wiring going from the right connector of the element to the bottom connector of the power switch, figure 4.

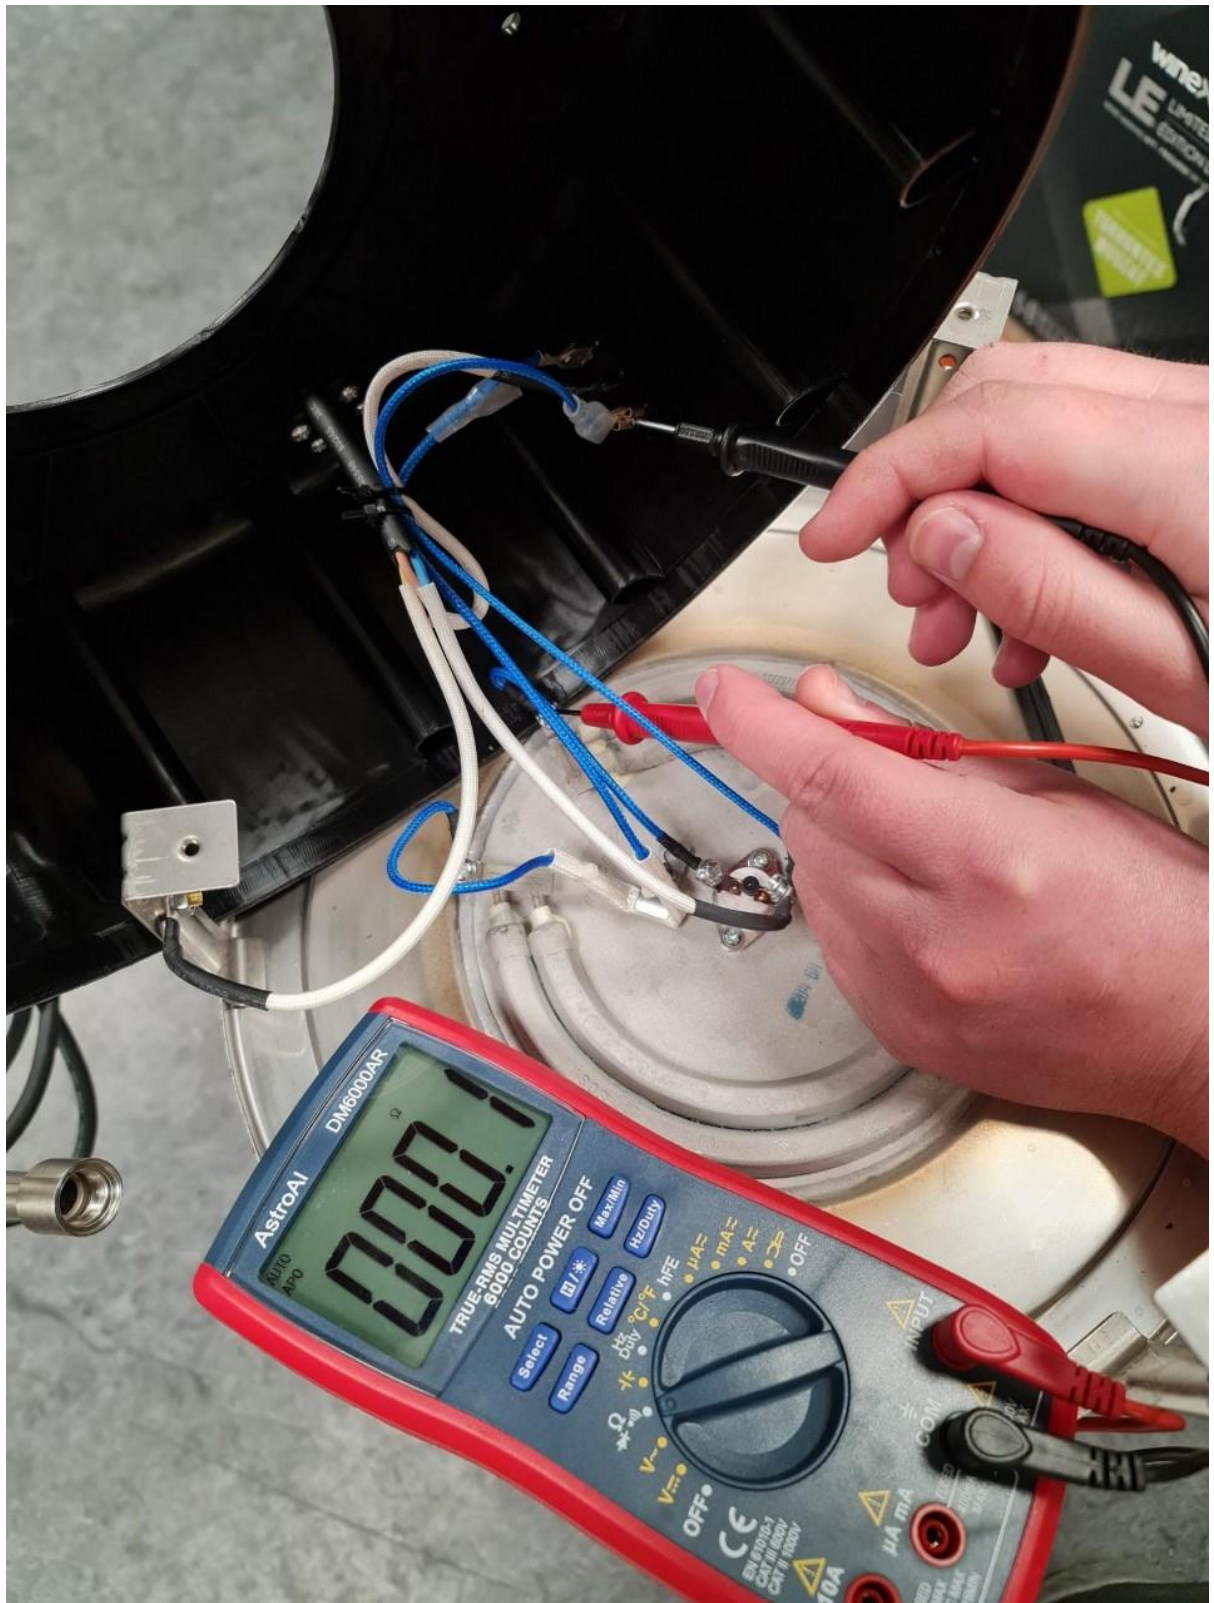


Figure 4, Wiring check through thermal reset switch.