

CHERS, NICE TO NEETYOU





G SERIES

INSTALLING THE ('j') GF30 CONTROLLER

So, you're ready to go wireless and upgrade your Fermenter! The following instructions show you how to remove your existing controller and assemble your new **G**F30 Controller.

PRODUCT CONTENTS

- 1. Controller.
- 2.4 x Screw hole plugs.
- Self-fusing tape.
- Fermenter socket cap

COMPATIBILITY

This product is only compatible with the **G**F30 Controller. After installing the new controller, you will still be able to use your fermenter with the **G**C2, **G**C4 Gylcol Chillers and the Cooling Pump Kit.

ASSEMBLY


Before assembling this product, you will need a Phillips head screwdriver. For safety reasons, also ensure that your **G**F30 Fermenter is unplugged prior to assembly.

REMOVE THE CURRENT CONTROLLER

1. Remove the current controller and the 4 screws securing the controller mounting bracket on the **G**F30. Put them aside for now.




2. Carefully disconnect the 3 white-coloured, electrical connectors on the rear side of the controller mounting bracket. Once disconnected, you can disregard the bracket as it's no longer required with the new controller.

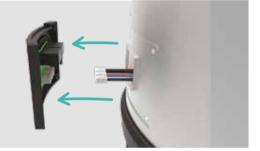


CONNECT THE NEW CONTROLLER

3. Take the new controller and join the 3 electrical connectors to the corresponding connectors on the fermenter. On both the controller and the fermenter, there is a larger connector with 3 pins and 2 smaller connectors with 2 pins.

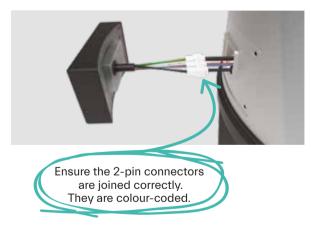

NOTE: Ensure correct orientation of the connectors as per the diagram below.

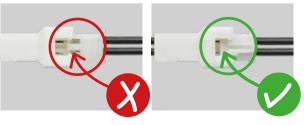

4. Check that all connections have been assembled correctly and that the controller switches on. At this stage, you can either connect the **G**F30 Fermenter to the **G**C2 or **G**C4 via the M12 fermenter power cord and ensure that the chiller is turned on. Alternatively, if you aren't using either the **G**C2 or **G**C4, you can connect the fermenter directly to a power socket. The controller screen should now turn on. If the controller does not turn on or an error message is displayed, please check that all connections have been assembled correctly.

CAUTION

Do not proceed to step 5 and apply the self-fusing tape until the controller and fermenter have been correctly connected.

APPLY THE SELF-FUSING TAPE

5. The self-fusing tape protects the 3 sets of connectors against condensation. It provides superior protection than standard electrical tape. To apply, please follow the steps below:

- A. Before applying, ensure that your hands are clean and that there is no dirt or oil on or near the connectors.
- B. Cut a strip of roughly 25 cm (10") length of tape.
- C. Peel 5 cm (2") of liner from the strip of tape.
- D. Press the exposed tape firmly onto one of the 3 sets of wires a few centimetres away from the connection. Make sure you completely overlap the first wrap over itself while at the same time stretching the tape.
- E. Continue to wrap the tape around the wires and connectors, peeling off the liner as you go. Ensure that the tape is always stretched as it is wrapped and that each layer partially overlaps the previous wrap. This tape works by self-adhering when it is stretched.
- F. Once you have wrapped over a few centimetres of the wires on the other end of the connection, finish by completely overlapping the last wrap and press the tape firmly.
- **G.** Cut off any remaining loose tape. Your finished connection should look like the image below.
- H. Repeat these steps for each of the remaining 2 connections.



SECURE THE NEW CONTROLLER

6. Align and position the controller onto the fermenter body. Then secure in place using the 4 screws removed in step 1.



CAUTION

Hand-tighten only. Overtightening the screws may damage the thread.

7. Insert the 4 screw hole plugs into position. The smaller end of the plug goes into the controller first until the plug surface is flush with the controller.



8. Attach the fermenter socket cap onto the back of the fermenter by stretching the fixing band loop onto the socket as shown.



Assembly is now finished. Please see the **G**F30 Fermenter instructions for more information on how to set up wireless control with the **G**F30 Fermenter Controller. Also discover how to connect it to the Grainfather Brewing App: grainfather.com/instructions/

ADVICE FOR CLEANING

• Always unplug your fermenter and screw on the fermenter socket cap prior to cleaning.

• The **G**F30 Fermenter Controller is splash proof to make cleaning the outside of your fermenter easy.

• Do not use a high-pressure hose directly on the controller or the fermenter power socket.

• Avoid the controller and power socket (even with the cap securely in place) coming into contact with water for extended periods of time.

IMPORTANT C SAFEGUARDS


READ AND FOLLOW ALL INSTRUCTIONS

CAUTION - Risk of fires and electric shock.

- Replace only with genuine Grainfather cord set.
- Do not immerse in water.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE

FOR COMMERCIAL AND INDOOR USE ONLY

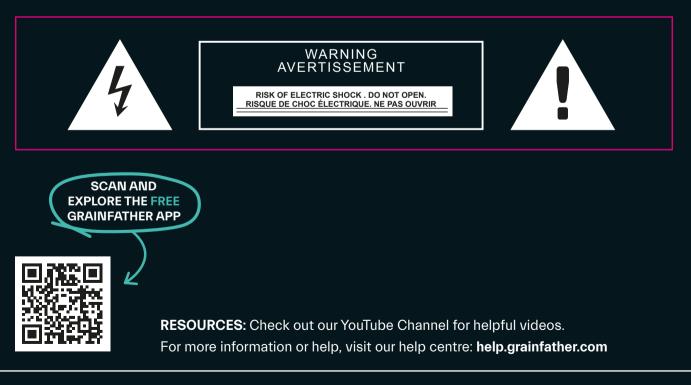



WWW.GRAINFATHER.COM